 
 
 
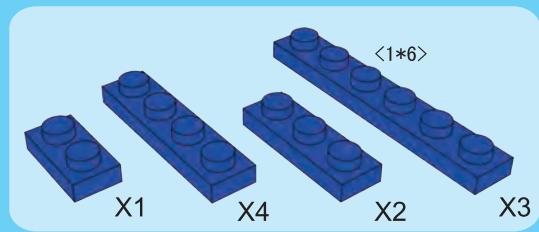 
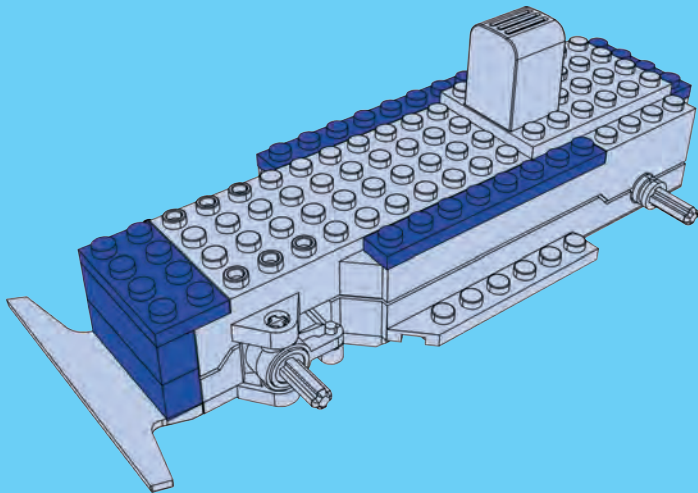 
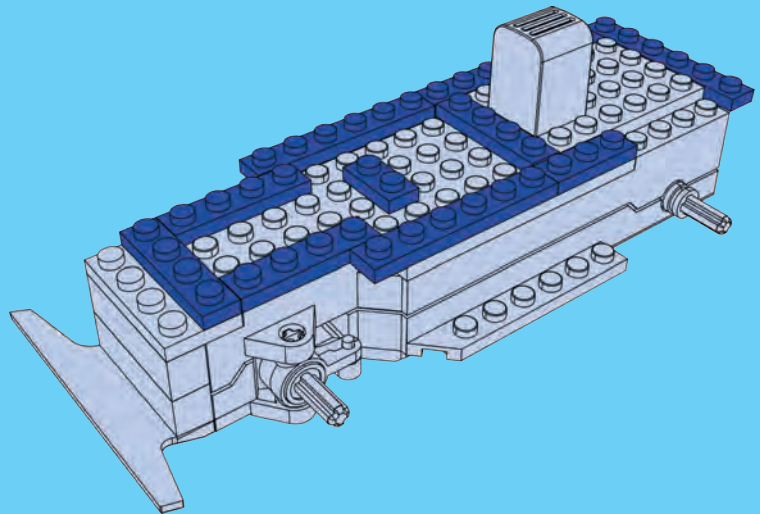 
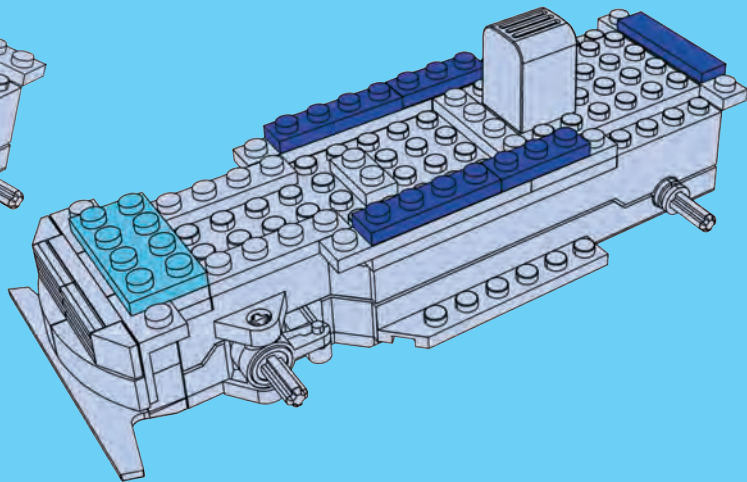 
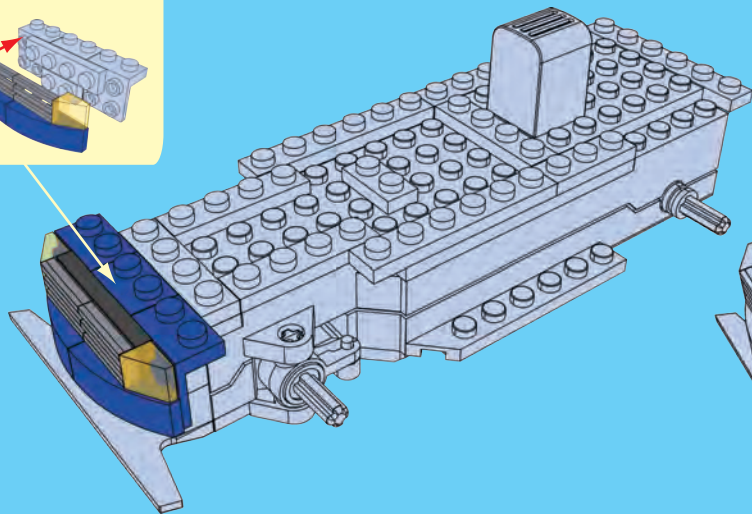 



6

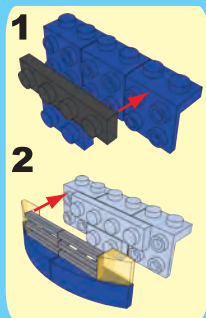


 
7

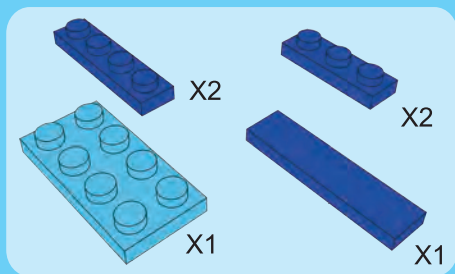

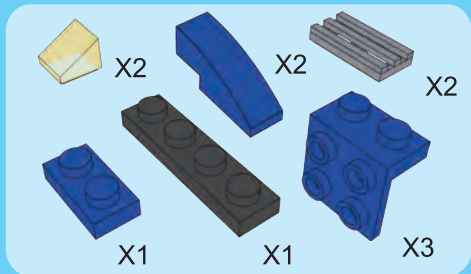


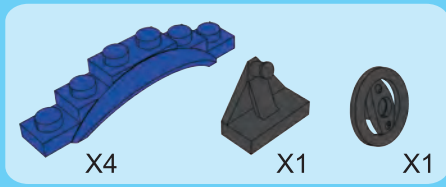


10

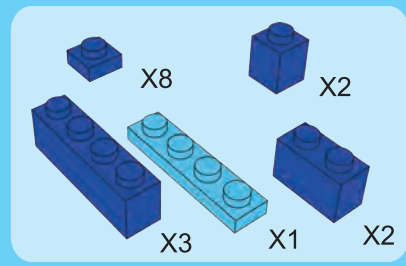 
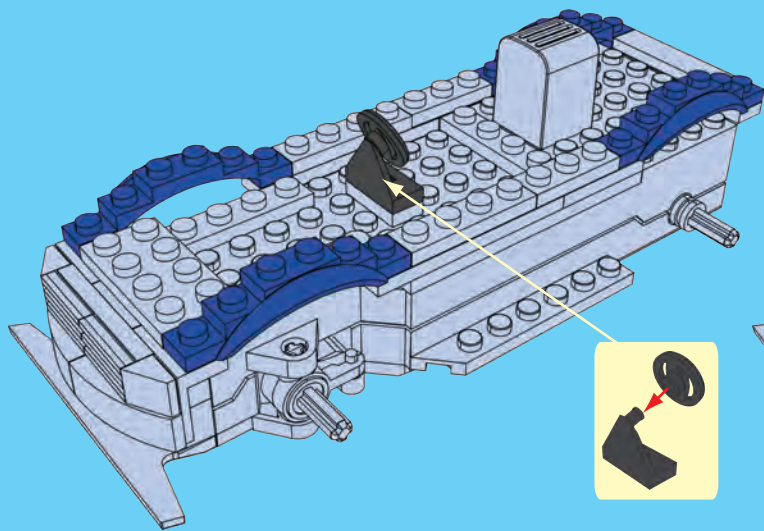 


11


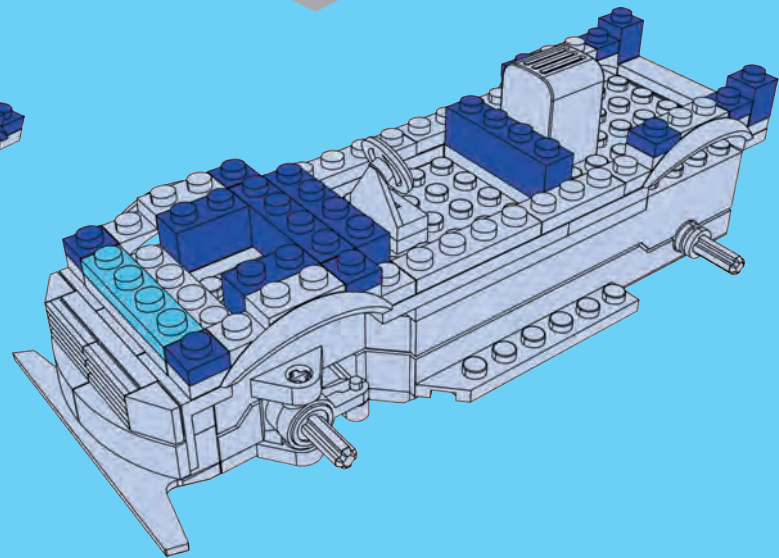 



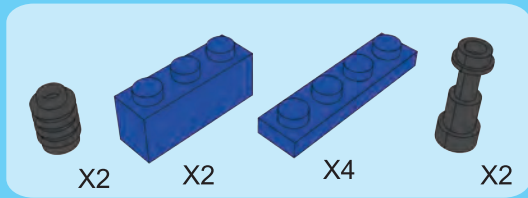 


**12**

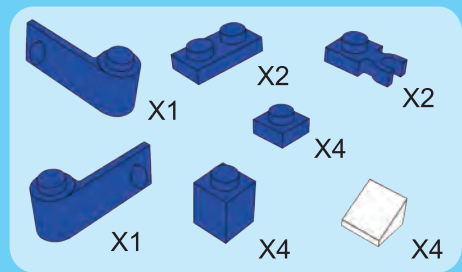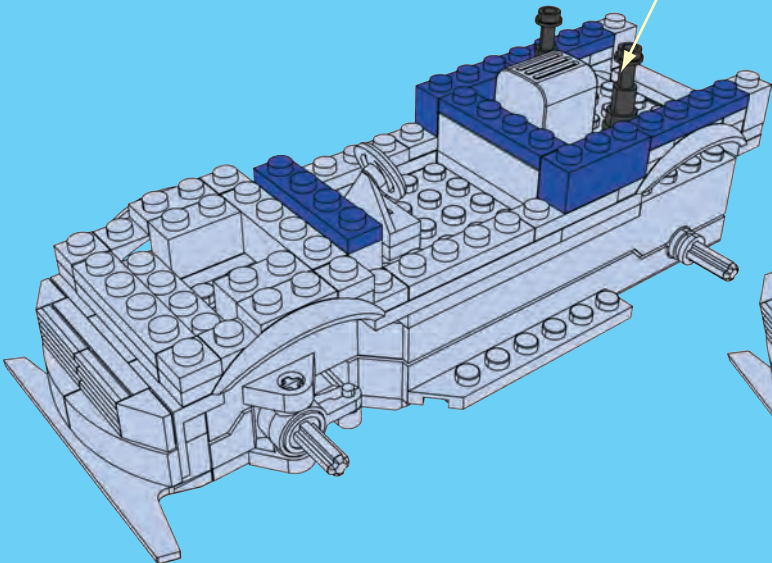  


**13**

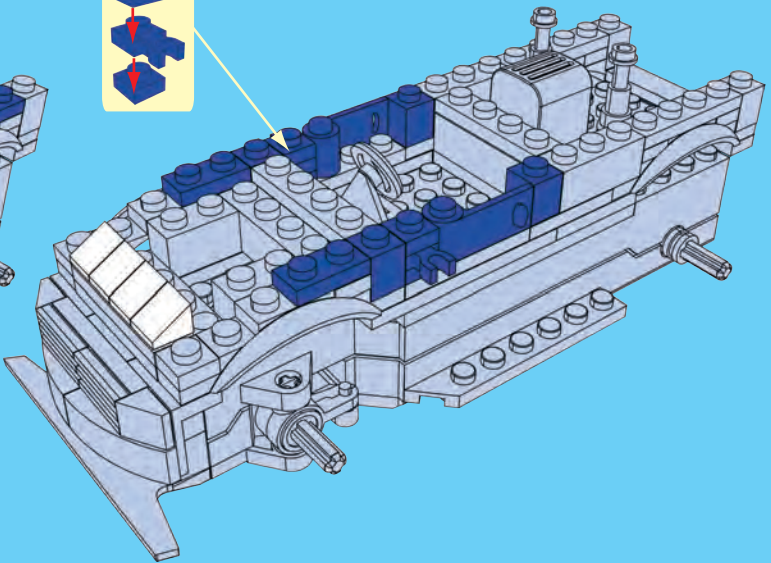  


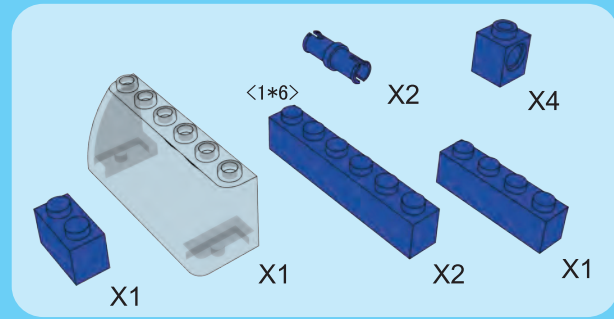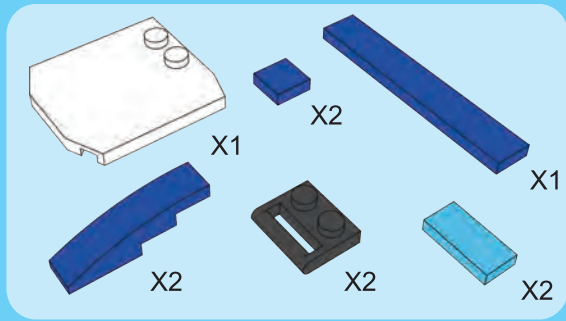  


14


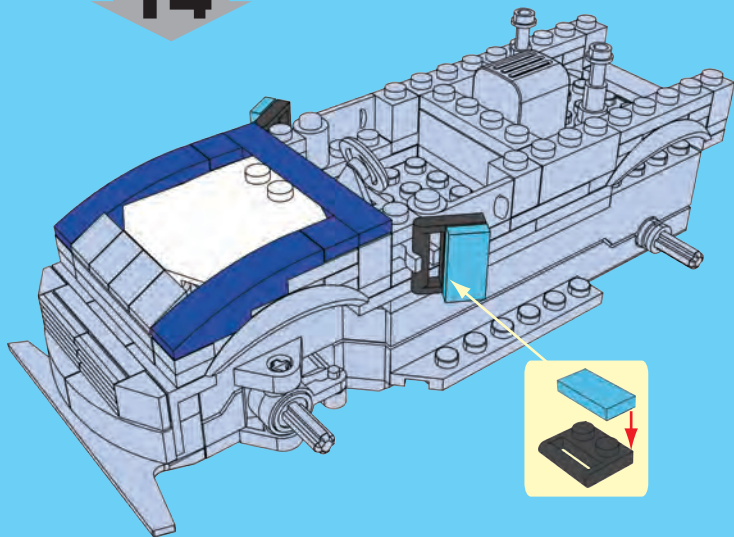 


15


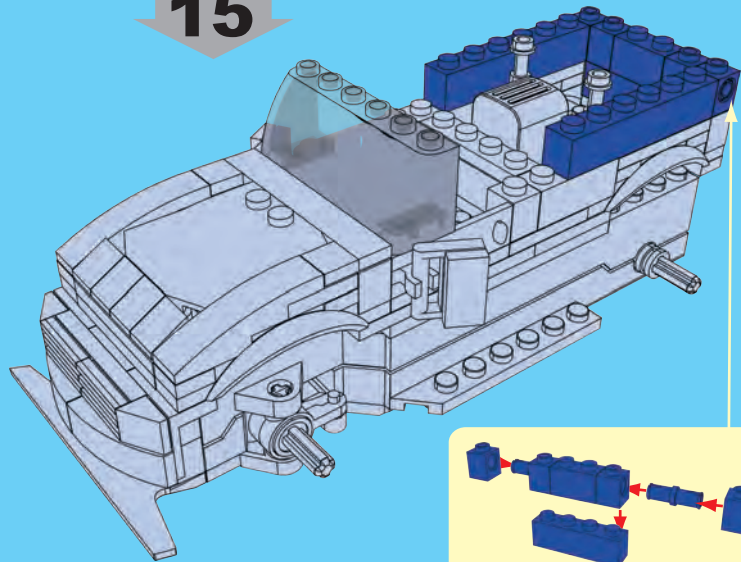 


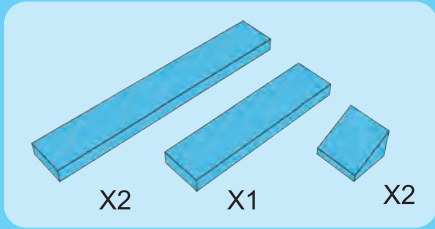 


16

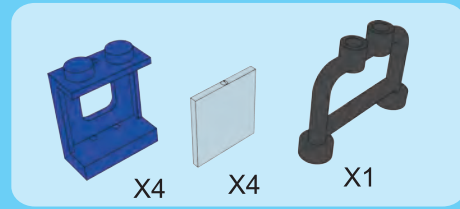 
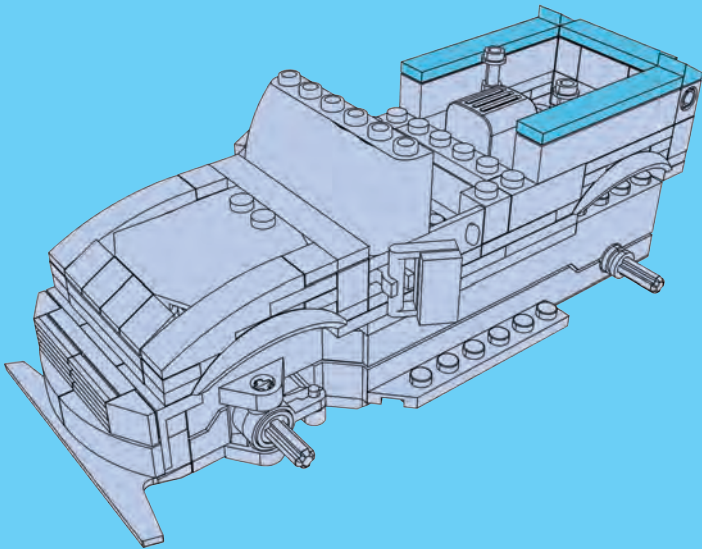 


17

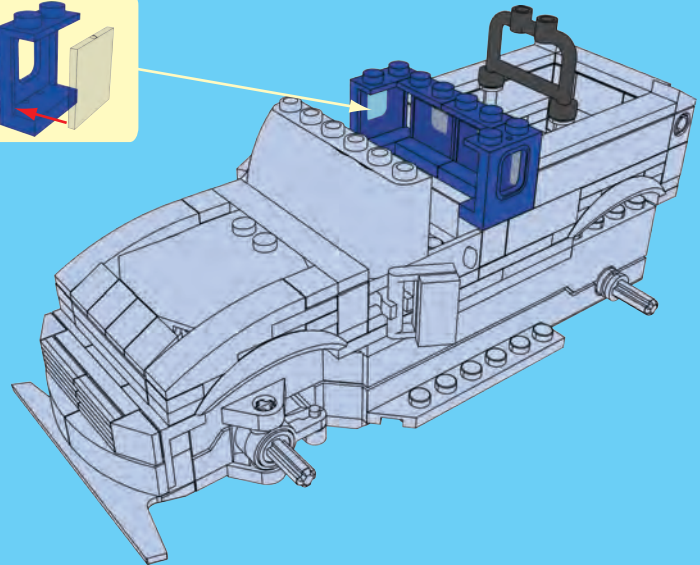 
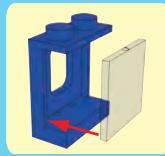 


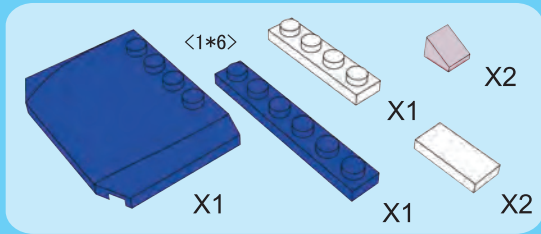 

**18**

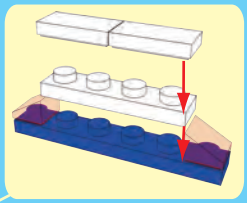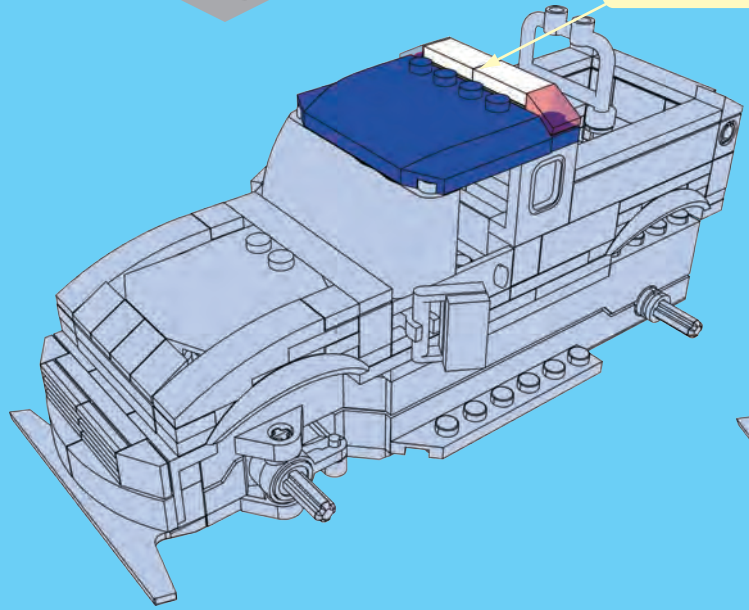  

**19**

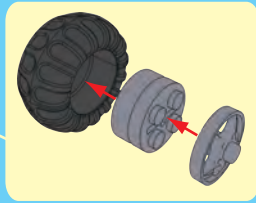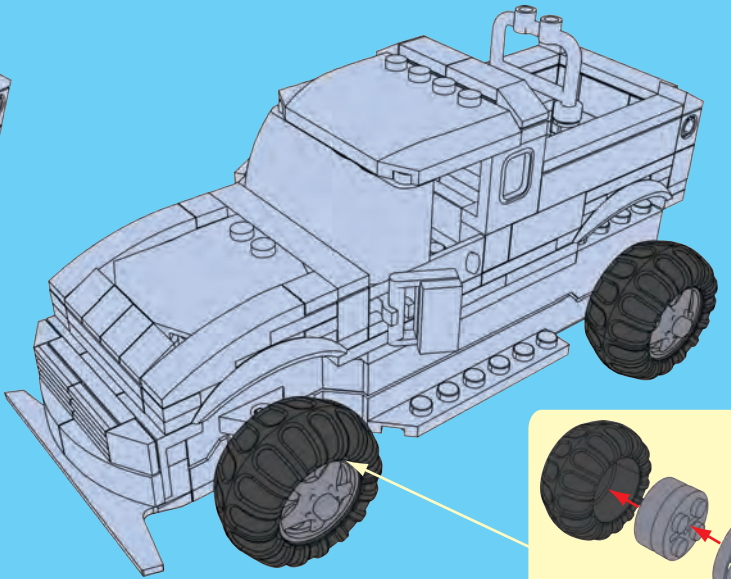  



# WINNER

4 CHANNELS RADIO CONTROL

- FORWARD, LEFT/RIGHT,  
STOP REVERSE, LEFT/RIGHT
- FULL FUNCTION TRANSMITTER
- ALWAYS ACTION STEERING

NO.20206



POWER FUNCTIONS  
**INFRARED CONTROLLER**  
4 CHANNELS RADIO CONTROL

# WINNER

4 CHANNELS RADIO CONTROL



20206



20203



Toys contain electronic components, can't into the water or use in humid environments. Please use dry cloth to wipe the stains on surface.

