

By pressing an selected action on the right for a few seconds, you can delete the actions you don't need.



Left or right switch action programming: Left hand, Right hand, Move, Expression, Music.



Click this option to preview the selected actions in the lower right corner.



Click this option to save the selected actions in memory.



Click this option to select or delete the saved program



Click this option to perform actions

#### 4)CONTENT:

- ① GYMNASTICS: There are two different gymnastics.
- ② STORY: There are 4 different stories in total.
- ③ VOLUME: There are three levels of volume
- ④ DANCE MUSIC: There are 8 different dances.
- ⑤ MUSIC: There are 10 different music.

