


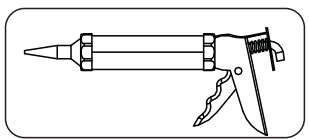


18

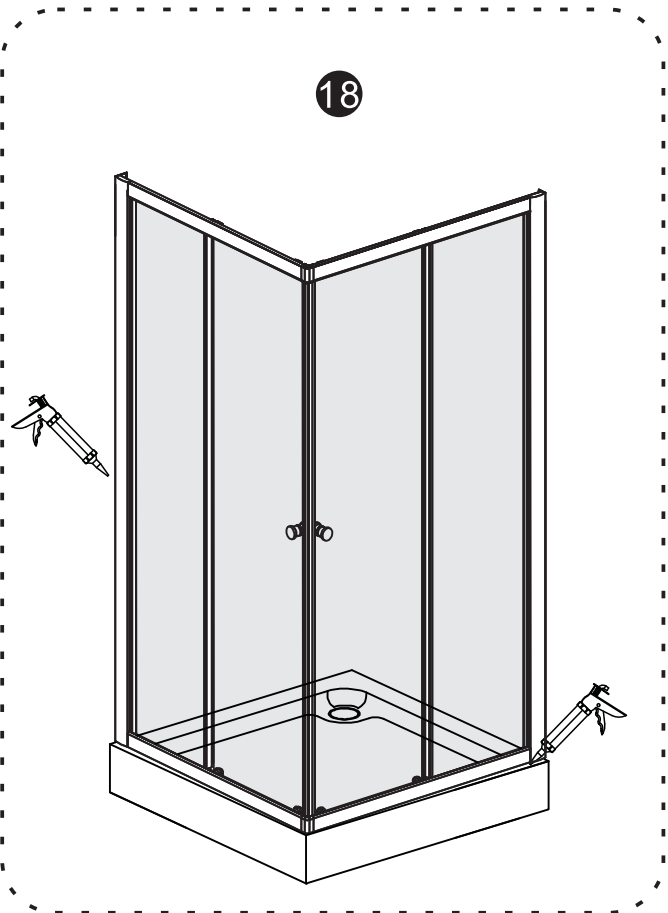


ИНСТРУКЦИЯ ПО УСТАНОВКЕ И ЭКСПЛУАТАЦИИ

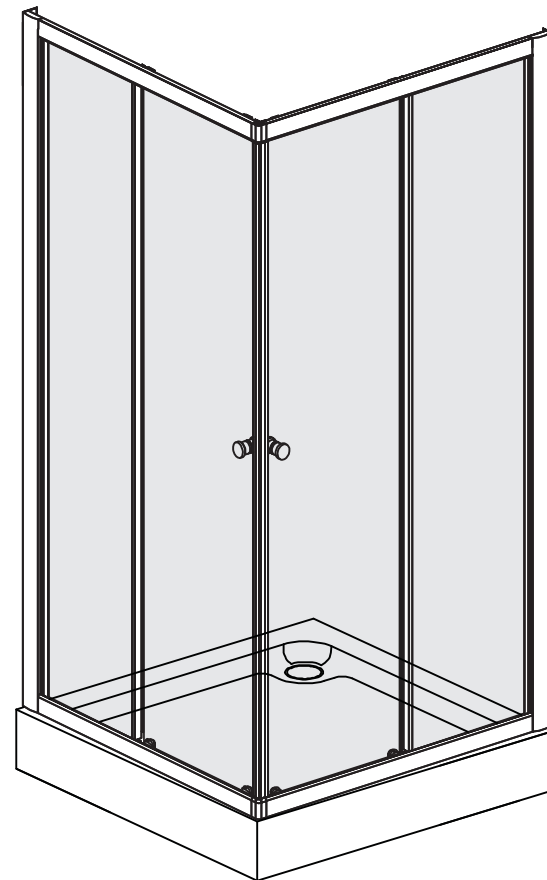

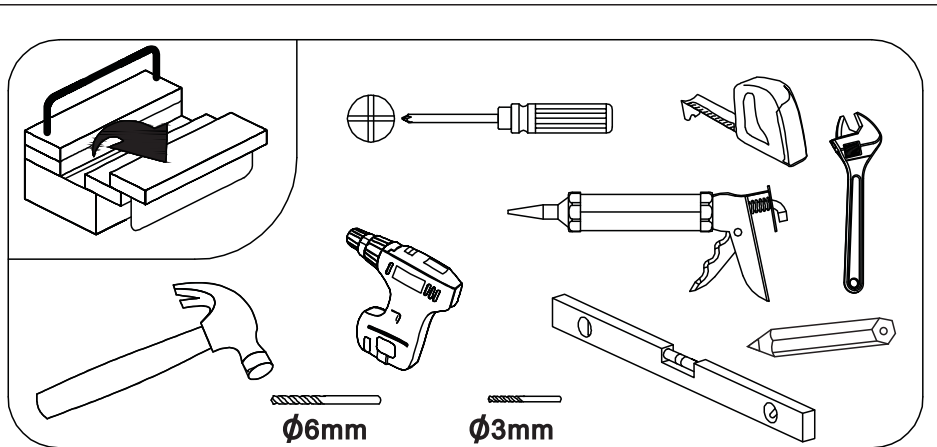





A1		ST4X20	X8
A2		ST4X8	X8
A3		ST4X10	X4
A4		ST4X30	X8
A5		ST4X12	X8
B1			X8
B2			X4
B3			X2
C1			X2
C2			X2
C3			X2
D1			X8
D2			X8
E1			X2

-1-

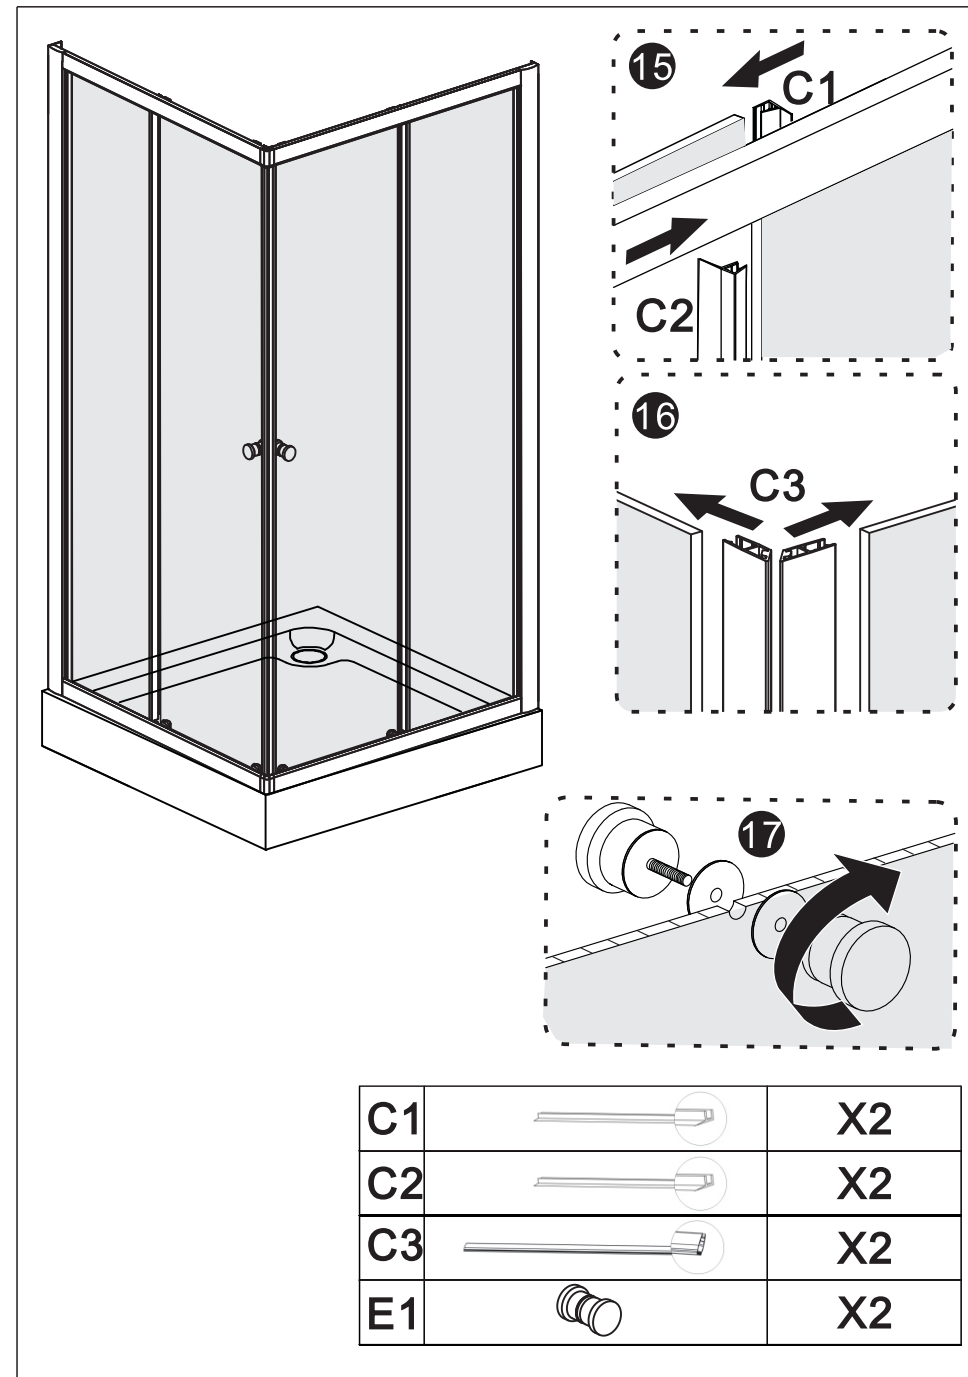





C1		X2
C2		X2
C3		X2
E1		X2

-6-

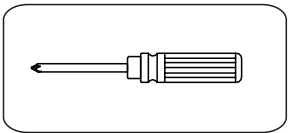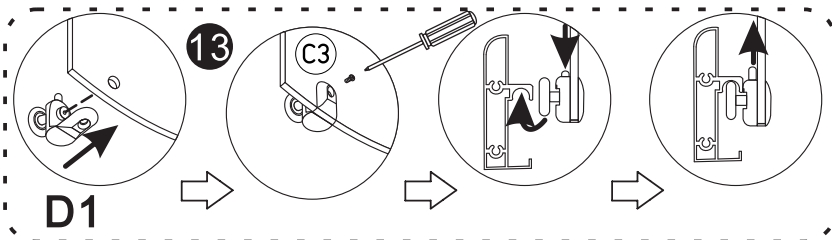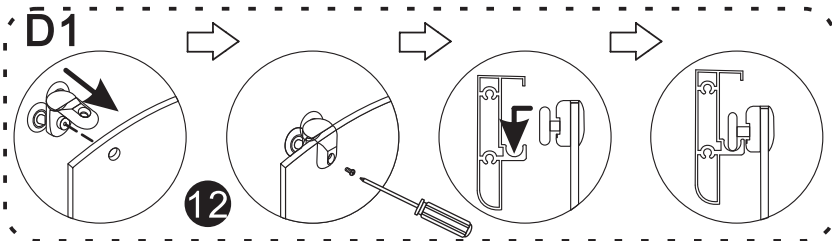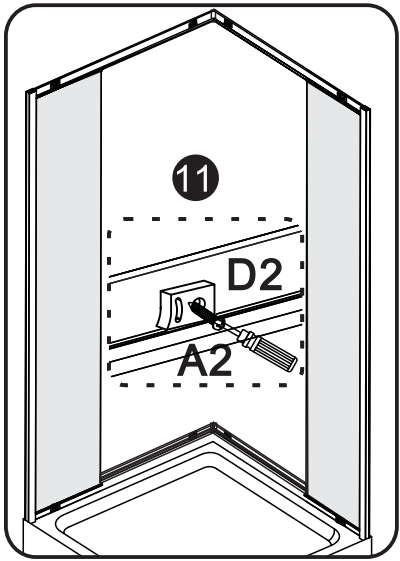

D1		X8
D2		X8
A2	ST4X8	X8

-5-

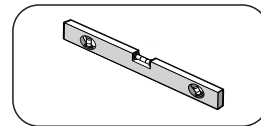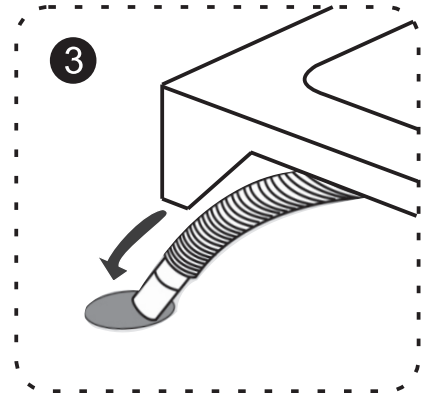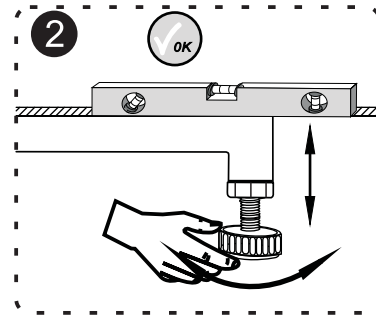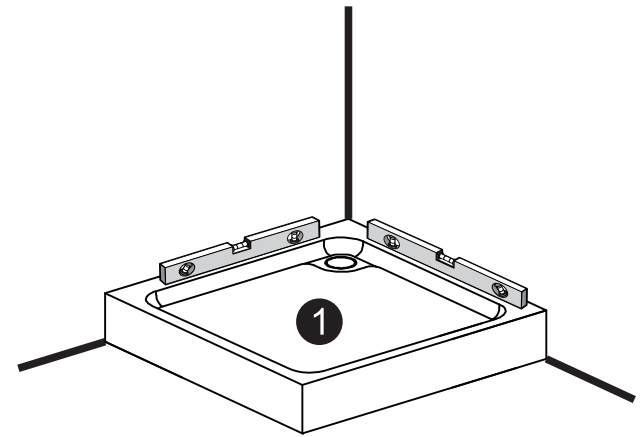

-2-

