



Multicooker / Мультиварка

RCM- 1101

Instruction manual/ Инструкция по эксплуатации


EN






RUS

DEAR CUSTOMER!

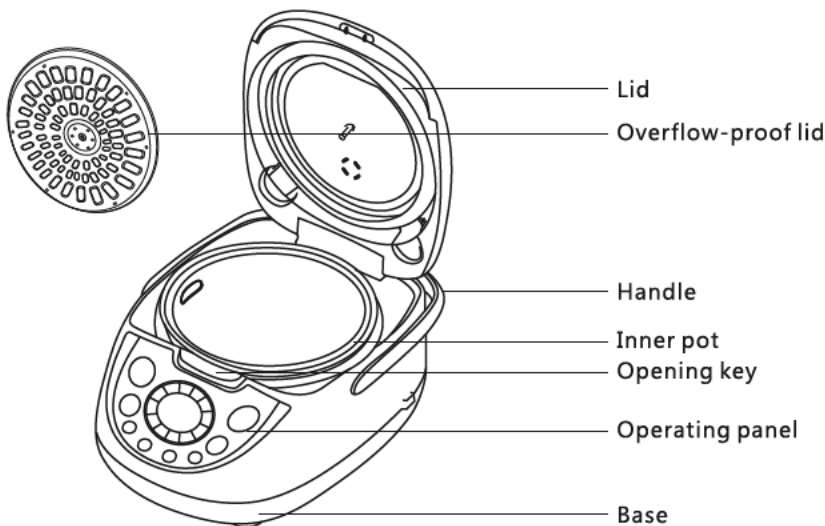We congratulate you on purchasing home appliance of “MAGNIT” trademark. We are sure that this unit will correspond to the highest requests for the quality and will become the real reliable support in your home cares. Before starting using this appliance, please carefully read the instruction manual and follow the rules of using. In this case the trademark “MAGNIT” will assure the long life of the equipment you have bought.

Thank you for choosing us!



| Rice spoon | Cup measure | Steamer | Power cord | Soup spoon |
|---|---|---|---|---|
|  |  |  |  |  |



SAFETY PRECAUTIONS

- Read all instructions carefully
- Do not touch hot surfaces. Use handle or knobs.
- To protect against electric shock, do not immerse cord, plug or appliance in water or other liquid.
- Close supervision is necessary when appliance is used near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the malfunctions or if the appliance or power cord is damaged. It must be replaced by the manufacturer or its service agent or a qualified person in order to avoid electric shock.
- Any accessory not evaluated for use with this appliance may cause injury.
- Do not use outdoors.
- Do not let the cord to hang over edge of table or counter or touched by any hot matters.
- Do not place the appliance on or near hot glass or electric burner or in a heated oven.
- Do not use appliance for other than intended use.
- The plastic container is designed for use with this appliance, it must never be used on the ranged top. Do not set hot container on a wet or cold surface. Do not use a cracked container or a container with loose or weakened handle. Do not clean container with cleaner, steel wool pads or other adhesive material.
- Scalding may occur if the lid is removed during the brewing cycles.

- Using sponge or pledget with scout to clean non-stick inner pot, steamer, and aluminum cover.
- After washed, wipe dry carefully.
- Put them back in place.

3. Preparation of cooking:

Rice:

- It's better not to wash rice in the inner pot directly in order to avoid the damage of the inner pot.
- Put the cleaning rice into the inner pot and pout in proportionable water.
- Scale of water can be adjusted according to you hobby.
- Don't let the water over the highest scale.

Steam:

- Scale of water must be paid more attention so that water will not to over flow the steam shelf.
- Put steam shelf into inner pot.
- Add food.

Using everytime before:

- The outside of inner pot shoul be clean(especially the base), ensure there is nothing between inner pot and heating plate.
- Put inner pot in the body suitable.
- Turning inner pot, ensure the bottom of inner pot and teating plate and sensors have good contacts.
- Ensure aluminum cover had set up and operate well.
- Close and lock the top lid.
- Connect the Electricity.
- Don't Connect the Electricity if you are not finished the above steps.

V. Description of functions:

- For the functions of rice and fast cook, the cooking time is fixed and control by computer, which can not be adjusted.
- For the functions of boil, bake, reheat, fry, cake/bread, steam, soup and free, the cooking time can be adjusted by Cooking Min. button.
- For the functions of yoghurt and stew, the cooking time can be adjusted by Cooking Hrs. button.

RICE (Picture1)

Thoroughly wash the rice and drain before use.

Use the measuring cup to measure the rice. For every 1 full cup of rice, you will need 1 full cup of cold water. If you prefer softer rice, just add a little more water.

Place both the rice and water into the pot and then close the lid.



(Picture1)

When the kitchen robot is powered on, the indicator lamp of "Rice" lights up. The display shows 00:55. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the rice has fully cooked.

The cooking time for rice is around 55 minutes (The time is not the exact time, but just for your reference. Because of different capacity of water and rice, different voltage and temperature, the cooking time is also different.)

When the rice is fully cooked, the digital display will show "bb" and will automatically go into keep warm mode.

FAST COOK (Picture2)

The fast cook function can be used as a sauté function when used in combination with the steam or stew function. Use the fast cook function as a stove top burner to sauté meats, as well as vegetables and grains, before selecting the appropriate program to finish cooking a dish.



(Picture2)

Add enough oil to the base of the pot and let it melt and heat up. Now add the food you wish to fast cook. Make sure all the food is evenly cut up in order for it to cook at the same rate.

When using the quick cooking function, the lid should ideally be left open to allow the contents to be stirred.

CAUTION: The appliance gets very hot while in use, take care when stirring contents.

Press "Menu" button and choose "Fast Cook" , corresponding indicator lamp of "Fast Cook" lights up. The digital display shows 00:45. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.

The cooking time for fast cook is around 45 minutes (The time is not the exact time, but just for your reference. Because of different capacity of foods, different voltage and temperature, the cooking time is also different.)

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

BOIL (Picture3)

Press "Menu" button and choose "Boil" , corresponding indicator lamp of "Boil" lights up and the default time of digit tube also lights up. The digital display shows 00:50. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.



(Picture3)

The cooking time for boil is around 50 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

CAKE/BREAD (Picture4)

Press "Menu" button and choose "Cake/Bread" , corresponding indicator lamp of "Cake/Bread" lights up and the default time of digit tube also lights up. The digital display shows 00:55. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.



(Picture4)

The cooking time for cake/bread is around 55 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode

PORRIDGE

Press "Menu" button and choose "Porridge", corresponding indicator lamp of "Porridge" lights up and the default time of digit tube also lights up. The digital display shows 00:60. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.

The default cooking time for porridge is around **60** minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show 00: 10, 00:15.....00:95".

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

NOTE: It's better to cooking it as soon as it has bubble when mixing.

Operation:

To put some cooking oil on the bottom of the pot, pour the prepared cake material into the pot and close the lid.

Press "Menu" button and choose "Cake/Bread" , the digital display shows 00:55. Press "Start" button, the programme has started.

The cooking time for bake is around 55 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

YOGHURT: (Picture5)

Ingredients:

500ml Pure milk, 50ml Plain yoghurt (Plain yoghurt is to be used as microbial strain, so it must be plain yoghurt), sugar or honey.

Tool: cup with cover and spoon.

Preparation:

To disinfect the cup and spoon firstly.

Pour the pure milk into the cup, then add the yoghurt and mix the pure milk and yoghurt and cover the cup.

OPERATION:

Place the cup in the pot and close the lid.

Press "Menu" button and choose "Yoghurt" , corresponding indicator lamp of "Yoghurt" lights up and the default time of digit tube also lights up. The digital display shows 00:08. Press "Start" button, the programme has started. The indicator lamp will remain lighting until the programme has finished.

The cooking time for yoghurt is around 8 hours, press "Cooking Hrs." button you can adjust it, the range of cooking hour is 1-10 hours. Press "Cooking Hrs" button each time will add 1 hour and the display will appear as "00: 01, 00: 02.....00:10" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

NOTE: The well-down yoghurt is congealed, having a smooth, gleaming surface with milk fragrance. You can add sugar and honey as your favors.

REHEAT (Picture6)

Press "Menu" button and choose "Reheat" , corresponding indicator lamp of "Reheat" lights up and the default time of digit tube also lights up. The digital display shows 00:30. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.

The default cooking time for reheat is around 30 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

Ensure that the food is thoroughly heated through before eating.




(Picture5)



(Picture6)

FRY (Picture7)

Press "Menu" button and choose "Fry", corresponding indicator lamp of "Fry" lights up and the default time of digit tube also lights up. The digital display shows 00:40. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.

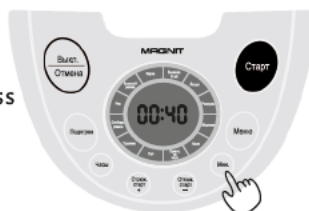

(Picture7)

The default cooking time for fry is around 40 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

NOTE: Please open the lid during the cooking process.

BAKE (Picture8)

Press "Menu" button and choose "Bake", corresponding indicator lamp of "Bake" lights up and the default time of digit tube also lights up. The digital display shows 00:40. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.



(Picture8)

The cooking time for bake is around 40 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

STEAM (Picture9)

Place the steam plate on the pot and then fill the pot with water to just below the steam plate. Place food onto the steam plate.

Press "Menu" button and choose "Steam", corresponding indicator lamp of "Steam" lights up and the default time of digit tube also lights up. The digital display shows 00:40. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.



(Picture9)

The default cooking time for steam is around 40 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

SOUP (Picture10)

Press "Menu" button and choose "Soup", corresponding indicator lamp of "Soup" lights up and the default time of digit tube also lights up. The digital display shows 00:50. Press "Start" button, the cooking has started. The indicator lamp will remain lighting until the programme has finished.



(Picture10)

The default cooking time for soup is around 50 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

SLOW STEW (Picture11)

Press "Menu" button and choose "Stew", corresponding indicator lamp of "Stew" lights up and the default time of digit tube also lights up. The digital display shows 00:02. Press "Start" button, the programme has started. The indicator lamp will remain lighting until the programme has finished.



(Picture11)

The cooking time for slow stew is around 2 hours, press "Cooking Hrs." button you can adjust it, the range of cooking hour is 1-10 hours. Press "Cooking Hrs" button each time will add 1 hour and the display will appear as "00: 01, 00: 02.....00:10" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

FREE (Picture12)

Press "Menu" button and choose "Free", corresponding indicator lamp of "Free" lights up and the default time of digit tube also lights up. The digital display shows 00:00. Press "Start" button directly without adjusting the cooking time, the kitchen robot will go into keep warm mode.




(Picture12)

The default cooking time for free is 0 minutes, press "Cooking Min." button you can adjust it, the range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

When the programme has finished, the digital display will show "bb" and will automatically go into keep warm mode.

NOTE: The temperature of this programme is low, so it is suitable for stew meat.

VI. Operation of control panel : (Picture13)

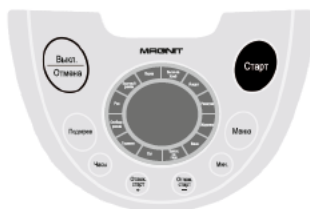

(Picture13)

OFF/CANCEL

If you want to cancel the keep warm mode or current operation, press the "Off/Cancel" button.

KEEP WARM

If you want the kitchen robot to go into the keep warm mode immediately, press "Keep Warm" button.

SETTING THE DELAY TIMER

The kitchen robot has a delay function and can be programmed to kitchen robot 15hrs in advance. We do not recommend this function for the use of meats as they should not be left at room temperature for more than 2 hours.

Press the MENU button to select the programme.

Press "Booking +" and "Booking -" button to adjust the time you need to start to cook, then press "Start" button. The digital display will count down the delay time and then cooking will start in the usual way.

The range of delay time is 1~24 hours.

For example, if you want to start to cook after 2 hours, adjust the booking time to 02: 00, then press "Start" .

Press "Booking +" and "Booking -" button each time will add 1 hour and the display will appear as "01: 00, 02: 00.....00:10" .



(Picture14)


NOTE: The preset time shouldn't over 12 hours. Or the foods will be not fresh. Please adjust the preset time according to weather and kind of food.

DOULE PRESET


E.G. If you want to set 40 minutes cooking time and 3 hours delay time:

Press " Menu" button and select the programme you need, then set the cooking time which is on the right of the digital display to 00:40 by the button " Cooking Min." . The range of cooking minute is 10 ~ 95 minutes. Press "Cooking Min" button each time will add 5 minutes, the display will show "00: 10, 00:15.....00:95" .

Press " Booking +" and " Booking – " button to adjust the booking time which is on the left of the digital display to 3 hours, the display will show 03:40, then press "Start" . The display will count down the delay hours and cooking time.

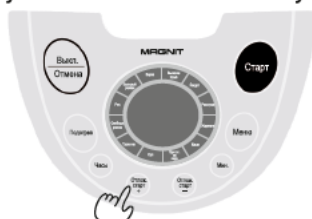

(Picture15)

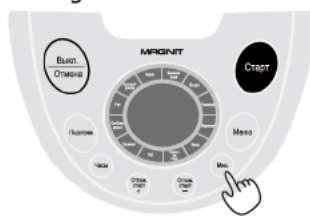

(Picture16)

VII. Cautions:

- Read the entire instruction manual before the first operating and save it.
- Before the first operating makes sure that the voltage in your wall outlet is the same as on the kitchen robot's rating label marked.
- Fire may occur if the kitchen robot is covered or touching flammable material such as curtains, draperies ect. Do not cover the kitchen robot!
- To connect the power cord to the kitchen robot firstly, then plug into the wall outlet.
- Use only the enclosed power cord.
- Keep the power cord and plug always clean and dry.
- If the supply cord is damaged, it must be placed by the authorized service centre.
- To unplug the kitchen robot do not pull the power cord.
- During cooking, the kitchen robot becomes very hot. Do not touch the hot surface.
- Before cleaning let the kitchen robot cool down to avoid burning.
- To avoid the electrical shock and kitchen robot damage, do not insert any object into the openings of the kitchen robot.
- **WARNING:** Do not use this kitchen robot near water. Do not use this kitchen robot near bathtubs, showers, basins or other vessels containing water.
- Never immerse the kitchen robot, cord and plug into water.
- If the kitchen robot falls down into water, unplug it immediately and do not hurry to take it out.
- Never use the kitchen robot on a damp floor.

- Any examination, repair or adjustment must be done in an authorized Service Center. Do not repair the kitchen robot by yourself! If the opening of the kitchen robot is detected, the kitchen robot's guarantee will be canceled.
- Always unplug the kitchen robot when not in use/before cleaning.
- Do not let children play or use the kitchen robot.
- Do not use any abrasive, chemical, alcohol-contained cleaners and hard brushes for cleaning the kitchen robot.
- While using the kitchen robot, please observe the safety precautions.
- Incorrect operation and improper handling can lead to malfunctions of the kitchen robot and injuries to the user.
- If the kitchen robot has been used with infringement of guide's instructions, the kitchen robot's guarantee would be canceled and consumer would repair the kitchen robot at his/her expense.

| Programme | Defaulted Time | Temperature | Time Range |
|------------------|-----------------------|--------------------|-------------------|
| Rice | 55 minutes | 103? | 55 minutes |
| Fast Cook | 45 minutes | 105? | 45 minutes |
| Boil | 50 minutes | 100? | 10 ~95 minutes |
| Cake/Bread | 55 minutes | 130? | 10 ~95 minutes |
| Yoghurt | 8 hours | 48? ~50? | 1 ~10 hours |
| Reheat | 30 minutes | 95? | 10 ~95 minutes |
| Fry | 40 minutes | 130? | 10 ~95 minutes |
| Porridge | 60 minutes | 97? | 10 ~95 minutes |
| Steam | 40 minutes | 113? | 10 ~95 minutes |
| Soup | 60 minutes | 110? | 10 ~95 minutes |
| Stew | 2 hours | 120? | 1 ~10 hours |
| Free | 00 minutes | 115? | 0 ~95 minutes |

Voltage – 220-240 В, 50 Гц

Power – 900Вт

Capacity–5 л.


Life-time of the product is 2 years.

You can find full information about the appliances of “Magnit” trademark on www.magnit.net

Уважаемый покупатель!

Поздравляем Вас с приобретением техники торговой марки «MAGNIT». Мы уверены, что приобретенный товар будет соответствовать самым высоким запросам, предъявляемым Вами к бытовой технике и станет настоящим надежным помощником в Ваших домашних хлопотах. Перед началом эксплуатации, пожалуйста, внимательно ознакомьтесь с инструкцией и соблюдайте правила эксплуатации. В этом случае торговая марка «MAGNIT» гарантирует продолжительное бесперебойное функционирование приобретенной Вами бытовой техники.

Спасибо за Ваш выбор!

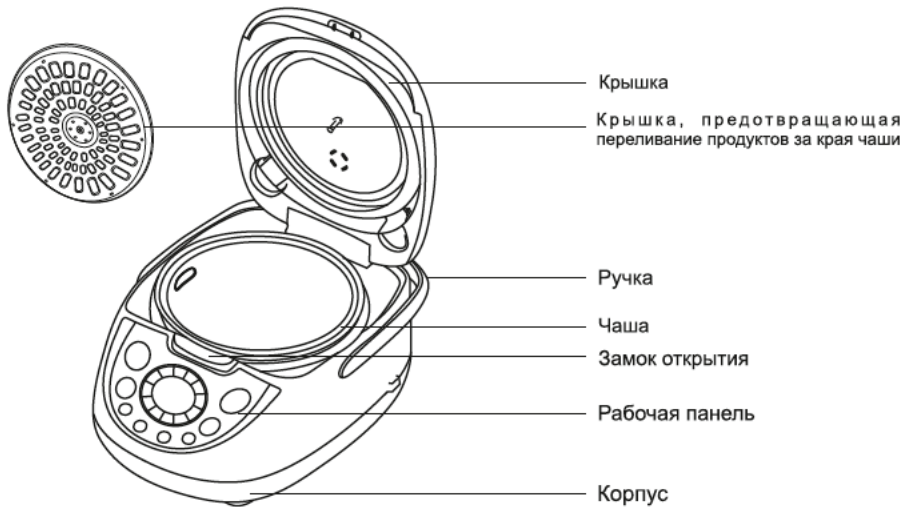

| | | | | |
|----------------|---------------|-----------|--------------|----------------|
| ложка для риса | мерный стакан | пароварка | шнур питания | ложка для супа |
| | | | | |

время отложенного
старта



время
приготовления

I. Особенности.

Приготовление пищи вместе с Мультиваркой MAGNIT чрезвычайно просто и не требует дополнительных навыков, так как время и температура приготовления устанавливается автоматически при выборе программы. В результате вы получаете превосходный вкус и большое разнообразие блюд, затрачивая минимум времени и усилий. Все программы включают в себя оптимальное сочетание температуры и времени приготовления. При своем небольшом размере, мультиповар MAGNIT обладает вместительной чашей, в которой вы сможете приготовить большое количество блюд и для большой семьи или компании.

Мультиварка MAGNIT заменит 6 приборов на вашей кухне.

1. Электрическая плита
2. Фритюрница
3. Пароварка
4. Духовая печь
5. Медленноварка
6. Хлебопечка

II. Составные части:

1. Крышка
2. Крышка, предотвращающая переливание продуктов за края чаши
3. Ручка
4. Чаша
5. Замок открытия
6. Рабочая панель
7. Корпус

Дополнительные аксессуары: мерная ложка, мерный стакан, лопатка, поддон для приготовления на пару.

III. Подготовительная часть:

Мультиварка MAGNIT имеет 12 программ:

- Выпечка/Хлеб
- Йогурт
- Рис
- Приготовление на пару
- Варение
- Суп
- Тушение

- Каша
- Режим быстрого приготовления
- Жарение
- Разогрев
- Свободный режим

После окончания любой программы мультиповар автоматически переходит в режим «KEEP WARM» - поддержание температуры.

Перед использованием прибора внимательно ознакомьтесь с данной инструкцией. Затем извлеките из прибора чашу, поддон для приготовления на пару и крышку, предотвращающую переливание продуктов (см. II.) , промойте с помощью мягкой губки и протрите насухо. После этого поместите все части в прибор.

Перед приготовлением:

- Не рекомендуется промывать рис непосредственно в чаше для приготовления, во избежание деформации антипригарного покрытия.
- Уровень воды не должен перекрывать отметку максимально допустимого уровня шкалы.
- При приготовлении на пару налейте необходимое количество воды, установите поддон внутрь чаши так, чтобы вода не переливалась через края поддона и разместите продукты.
- Убедитесь, что алюминиевая крышка для предотвращения переливания продуктов установлена надлежащим образом.
- Закройте крышку и убедитесь, что сработала блокировка замка
- Включите разъем в розетку.

IV. Описание заданных программ приготовления:

Для функций «РИС» и «Быстрый режим» запрограммировано определенное время приготовления, которое нельзя изменить.

Для функций «Йогурт» и «Тушение» время приготовления устанавливается кнопкой «Часы»

Для остальных функций время приготовления устанавливается кнопкой «Мин.»

РИС

Тщательно промойте рис перед приготовлением. Используйте мерный стакан для определения необходимого количества риса. На каждый мерный стакан – 1 стакан воды.

Положите рис в чашу, залейте водой и закройте крышку мультиварки. После включения прибора в сеть питания, на дисплее отобразится надпись «РИС» и время «00:55». Нажмите кнопку «СТАРТ». После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

БЫСТРЫЙ РЕЖИМ

Выберите функцию «Быстрый режим» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:35. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

ВАРКА

Выберите функцию «Варка» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:50. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

ВЫПЕЧКА/ХЛЕБ

Нажмите кнопку «МЕНЮ» и выберите функцию «ВЫПЕЧКА/ХЛЕБ». Установленное время приготовления - 00:55. Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

ЙОГУРТ

Нажмите кнопку «МЕНЮ» и выберите функцию «ЙОГУРТ». Установленное время приготовления – 8 часов. Вы можете увеличить время приготовления нажатием кнопки «ЧАСЫ.» до 10 часов. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

РАЗОГРЕВ

Выберите функцию «Разогрев» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:30. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

КАША

Выберите функцию «Каша» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:40. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

ЖАРЕНИЕ

Выберите функцию «Варка» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:40. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

Важно: Этот режим предусматривает приготовление при открытой крышке.

ПРИГОТОВЛЕНИЕ НА ПАРУ

Налейте воду в чашу мультиварки. Установите пароварку. Выберите функцию «Пригот.на пару» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:40. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

ТУШЕНИЕ

Выберите функцию «Тушение» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:02. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «ЧАСЫ» до 10 часов. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

СУП

Выберите функцию «Суп» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:50. Нажмите кнопку «СТАРТ». Вы можете увеличить время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

СВОБОДНЫЙ РЕЖИМ

Выберите функцию «Свобод.режим» с помощью нажатия кнопки «МЕНЮ» до тех пор, пока на дисплее не отобразится соответствующая надпись и время приготовления 00:00. Нажмите кнопку «СТАРТ». Вы можете выбрать время приготовления нажатием кнопки «МИН.» до 95 минут. После окончания приготовления на дисплее появится надпись «bb» и прибор автоматически перейдет в режим подогрева.

Важно: Для данного режима запрограммирована низкая температура приготовления.

ВЫКЛ./ОТМЕНА

Вы можете отключить режим подогрева нажатием кнопки «ВЫКЛ./ОТМЕНА»

УСТАНОВКА ОТЛОЖЕННОГО СТАРТА

Данный режим позволяет отложить начало приготовления. Однако не рекомендуется устанавливать отложенный старт более 2-х часов при приготовлении блюд из скоропортящихся продуктов (мясо, рыба, молочные продукты и т.д.)

Выберите необходимый режим приготовления. Установите желаемое время начала приготовления нажатием кнопки «Отлож.старт +» или «Отлож.старт -»

| Режим | Время приготовления | Температура | Временной диапазон |
|-----------------------|---------------------|-------------|--------------------|
| Рис | 55 минут | 103? | 55 минут |
| Быстрый режим | 45 минут | 105? | 45 минут |
| Варка | 50 минут | 100? | 10 ~95 минут |
| Хлеб/Выпечка | 55 минут | 130? | 10 ~95 минут |
| Йогурт | 8 часов | 48? ~50? | 1 ~10 часов |
| Разогрев | 30 минут | 95? | 10 ~95 минут |
| Жарение | 40 минут | 130? | 10 ~95 минут |
| Каша | 60 минут | 97? | 10 ~95 минут |
| Приготовление на пару | 40 минут | 113? | 10 ~95 минут |
| Суп | 60 минут | 110? | 10 ~95 минут |
| Тушение | 2 часа | 120? | 1 ~10 часов |
| Свободный режим | 00 минут | 115? | 0 ~95 минут |

КОМПЛЕКТНОСТЬ:

1. мультиварка - 1шт.
2. крышка - 1шт.
3. съёмный клапан - 1шт.
4. чаша -1 шт.
5. ложка для риса - 1шт.
6. мерный стакан - 1шт.
7. пароварка - 1шт.
8. шнур питания - 1шт.
9. ложка для супа - 1шт.
10. книга рецептов - 1шт.
11. инструкция по эксплуатации с гарантийным талоном внутри - 1шт.
12. Цветная коробка - 1шт.

Электропитание 220-240 В, 50 Гц

Мощность – 900Вт

Объем - 5 л.

АДРЕСА СЕРВИСНЫХ ЦЕНТРОВ

г. Волгоград, Толиман, ул. Кузнецкая, 49,
(8442) 27-05-06, 27-05-07

г. Волгоград, Сервис-Центр ТМ,
ул. 8-й Воздушной Армии, 35, (8442) 78-97-41

Срок службы изделия 2 года.

Самую полную информацию о технике торговой марки "Magnit" Вы можете найти на веб-сайте www.magnit.net

Фирма-производитель оставляет за собой право вносить изменения в дизайн, конструкцию и комплектность поставки продукции без дополнительного уведомления.

УСЛОВИЯ ГАРАНТИЙНОГО ОБСЛУЖИВАНИЯ

1. Настоящая гарантия имеет силу при соблюдении следующих условий:

- правильное и четкое заполнение гарантийного талона с указанием наименования модели, ее серийного номера, даты продажи и печати фирмы-продавца в гарантийном талоне и отрывных купонах;
- наличие оригинала квитанции (чека), содержащего дату покупки.

2. Фирма «MAGNIT» оставляет за собой право на отказ в гарантийном обслуживании в случае непредоставления вышеуказанных документов, или если информация в них будет неполной, неразборчивой, противоречивой.

3. Гарантия не включает в себя периодическое обслуживание, установку, настройку изделия на дому у владельца.

4. Не подлежат гарантийному ремонту изделия с дефектами, возникшими вследствие:

- механических повреждений;
- несоблюдения условий эксплуатации или ошибочных действий владельца;
- неправильной установки, транспортировки;
- стихийных бедствий (молния, пожар, наводнение и т. п.), а также других причин, находящихся вне контроля продавца и изготовителя;
- попадания внутрь изделия посторонних предметов, жидкостей, насекомых;
- ремонта или внесения конструктивных изменений неуполномоченными лицами;
- использования аппаратуры в профессиональных целях;
- отклонений от Государственных Технических Стандартов питающих, телекоммуникационных и кабельных сетей;
- при выходе из строя деталей, обладающих ограниченным сроком службы.

5. Настоящая гарантия не ущемляет законных прав потребителя, предоставленных ему действующим законодательством.

Гарантийный талон

на электрические изделия

Наименование изделия: _____

Модель: _____

Серийный №: _____

Наименование продавца: _____

Подпись продавца: _____

Гарантийный срок на данное изделия составляет: 12 месяцев

Гарантийный срок не предоставляется на расходные части изделия

*Товар мною осмотрен, претензий по качеству и комплектации не имею.
Инструкцию по эксплуатации на русском языке получил.*

« » _____ г. _____

дата продажи

подпись покупателя

М.П.

КУПОН №5

Срок проведения ремонта: _____
Кем выполнялись работы: _____

(Ф.И.О., должность, подпись уполномоченного работника «СЦ»)

Перечень проведенных работ:

Работу принял, претензий по качеству не имею: _____

(Ф.И.О., подпись владельца, дата)

« ____ » _____ г.



КУПОН №4

Срок проведения ремонта: _____
Кем выполнялись работы: _____


(Ф.И.О., должность, подпись уполномоченного работника «СЦ»)

Перечень проведенных работ:

Работу принял, претензий по качеству не имею: _____

(Ф.И.О., подпись владельца, дата)

« ____ » _____ г.

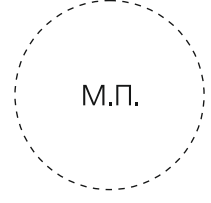

КУПОН №3

Срок проведения ремонта: _____
Кем выполнялись работы: _____


(Ф.И.О., должность, подпись уполномоченного работника «СЦ»)

Перечень проведенных работ:

Работу принял, претензий по качеству не имею: _____

(Ф.И.О., подпись владельца, дата)

« ____ » _____ г.

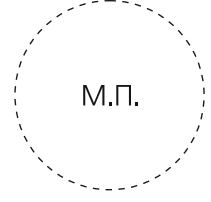

КУПОН №2

Срок проведения ремонта: _____
Кем выполнялись работы: _____


(Ф.И.О., должность, подпись уполномоченного работника «СЦ»)

Перечень проведенных работ:

Работу принял, претензий по качеству не имею: _____

(Ф.И.О., подпись владельца, дата)

« ____ » _____ г.

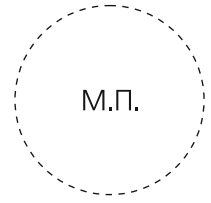

КУПОН №1

Срок проведения ремонта: _____
Кем выполнялись работы: _____

(Ф.И.О., должность, подпись уполномоченного работника «СЦ»)

Перечень проведенных работ:

Работу принял, претензий по качеству не имею: _____

(Ф.И.О., подпись владельца, дата)

« ____ » _____ г.

