


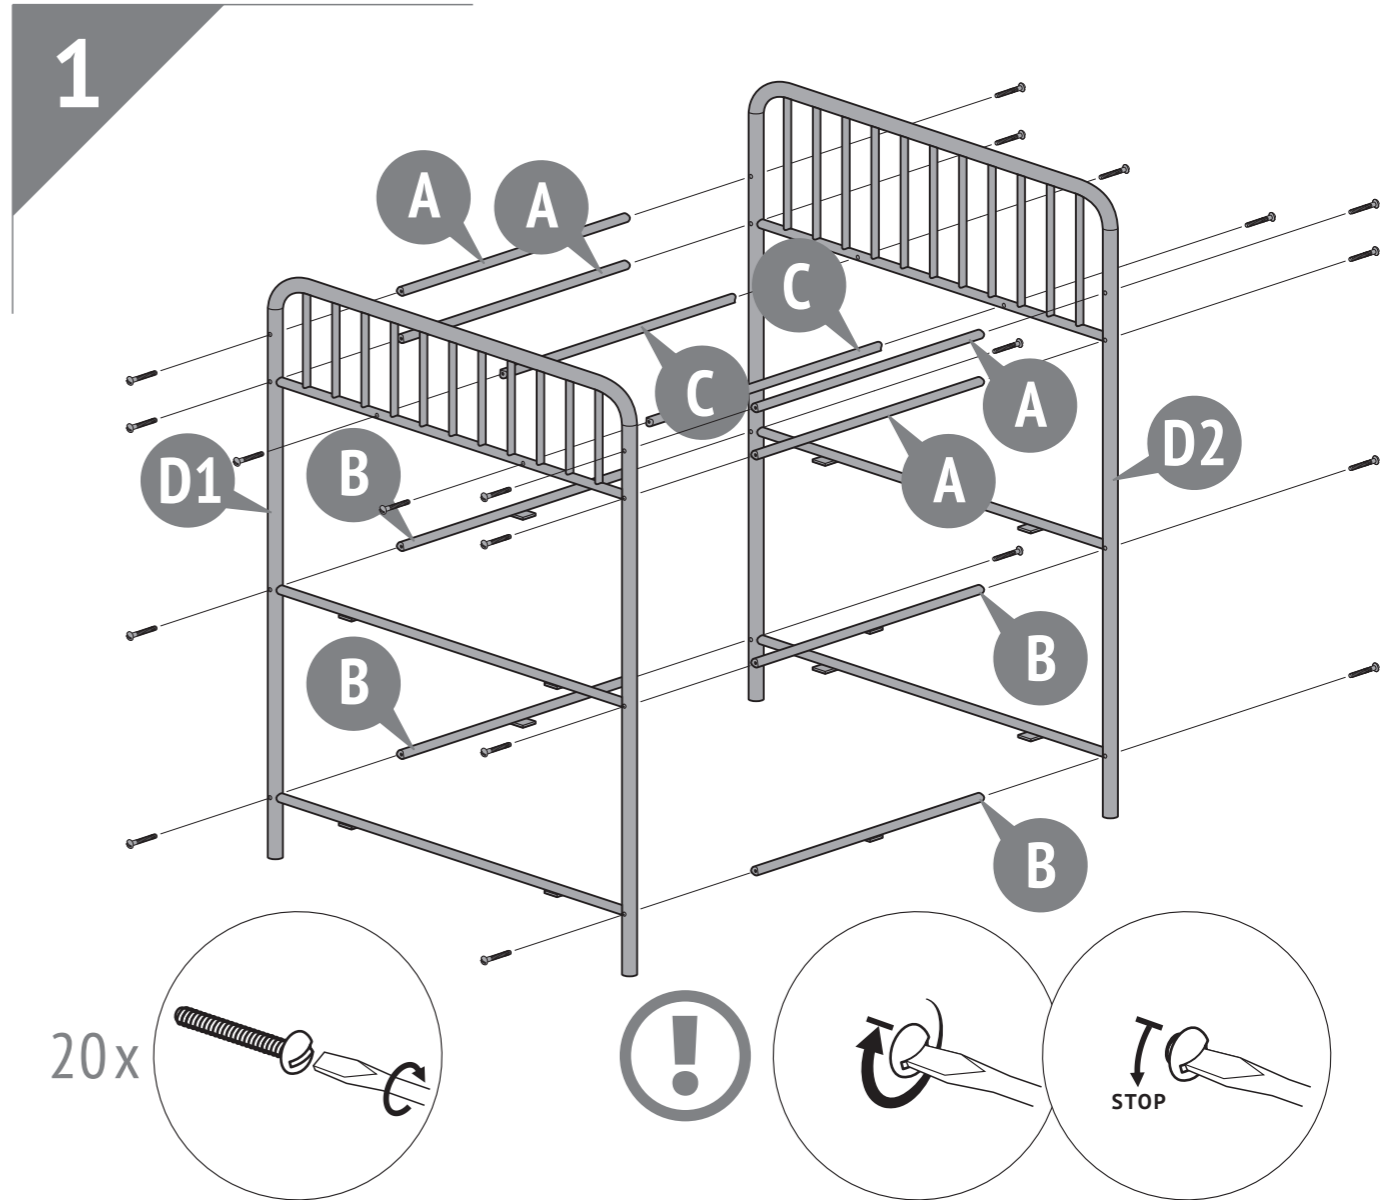
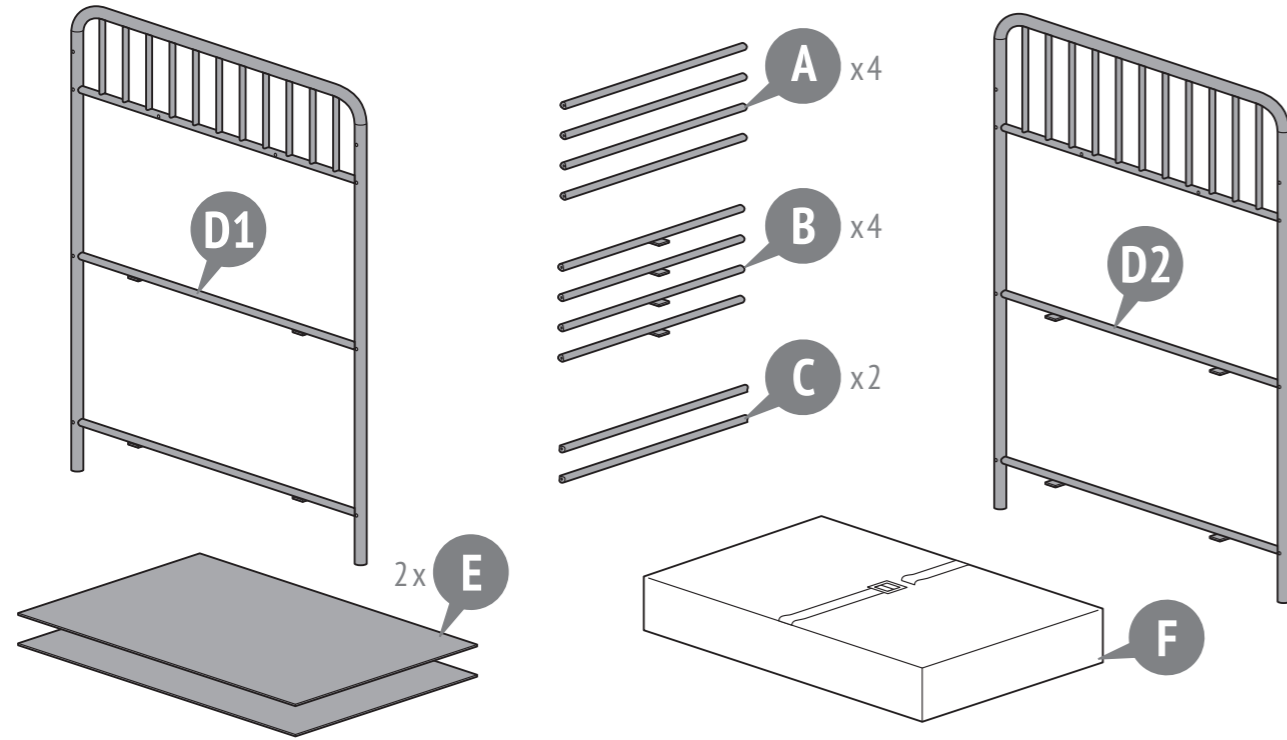
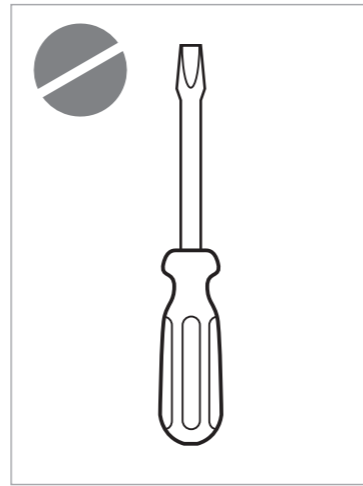
POLINI Vintage 1180



POLINI Vintage 1180

- EN To be assembled
- DE Das Produkt muss montiert werden
- NL Om gemonteerd te worden
- FR Pour être assemblés
- ES Para ser montados
- IT Per essere assemblati
- P Para ser montado
- RU Необходима сборка
- AE ليتم تجميعها


001 20 x 
 Screw M6 x 40
 Gewindeschraube M6 x 40
 Schroef M6 x 40
 Vis M6 x 40
 Tornillo M6 x 40
 Vite M6 x 40
 Parafuso M6 x 40
 البرغي




Number on the picture Nummer in der Zeichnung Nummer op figur Nombre à la figure Numero en el dibujo IL numero alla figura Número na figura Номер на рисунке الرقم على الرسمة	Number of parts in the product Stückzahl der Teile im Produkt Aantal componenten in het product Nombre des détails du produit Cantidad de elementos del producto La quantità dei dettagli nel prodotto Quantidade de peças Количество деталей в изделии كمية الأجزاء بالمنج	Parts description			Laying / Verpackung / Pakking / Pose / El embalaje / Posa / Estilo / Укладка / ترتيب
		Bezeichnung Onderdelen namen Names des pièces	Nombre de los elementos La nomenclatura dei dettagli Designação das peças Наименование деталей تسمية الأجزاء		Box / Karton / Plaats / Placer / المكان Lugar / Il posto / Espaço / Место
A	4	Crossbar Latte Lat	Barre transversale Barra de la cruz Bar croce	Barra transversal Перемычка العارضة	•
B	4	Crossbar Latte Lat	Barre transversale Barra de la cruz Bar croce	Barra transversal Перемычка العارضة	•
C	2	Crossbar Latte Lat	Barre transversale Barra de la cruz Bar croce	Barra transversal Перемычка العارضة	•
D1	1	Support Unterstützung Ondersteuning	Appui Sostén Traversa	Apoio Опора الداعم	•
D2	1	Support Unterstützung Ondersteuning	Appui Sostén Traversa	Apoio Опора الداعم	•
E	2	Shelf Regal Schap	Plateau Estante Ripiano	Estante Полка الجرف	•
F	1	Mattress Matratze Matras	Matelas Colchones Materasso	Colchão Матрас فراش	•



3

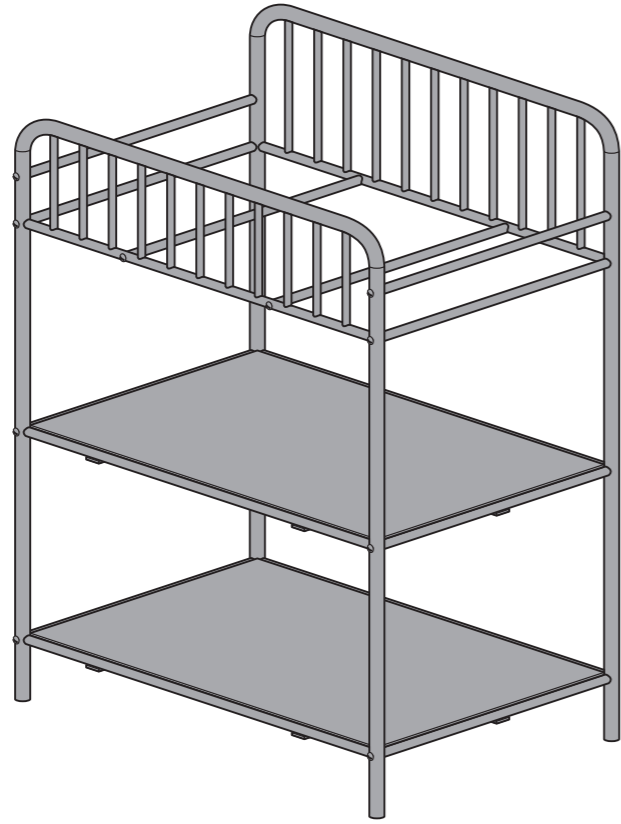

20x

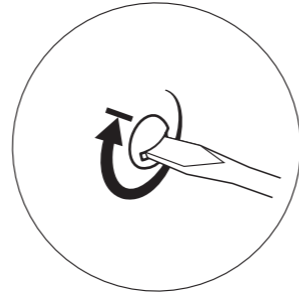

4

